## Nomenclature of Parts

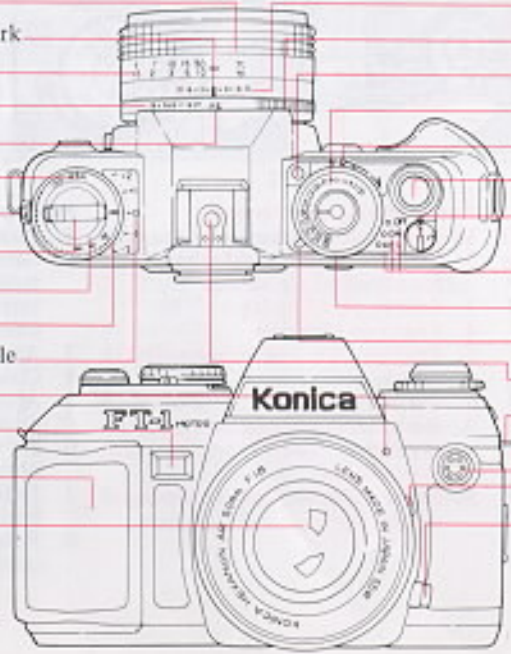


(1) Focusing Ring
(2) Distance/Aperture Index Mark
(3) Distance Scale
(4) Manual Aperture Scale
(5) AE Mark
(6) ISO/ASA Film Speed Scale
(7) Sync Socket (X)
(8) Rewind Crank
(9) Rewind Knob
(10) Film Speed Dial
(11) Exposure Compensation Scale
(12) Lens Mounting/Index Mark
(13) Self-timer LED
(14) Power Grip (Battery Case)
(15) Hexanon Lens
(16) Depth of Field Scale
(17) Aperture Control Ring
(18) Self-timer Button
(19) Shutter Speed Scale
(20) Main Switch
(21) Shutter Release
(22) SC (Single/Continuous) Switch
(23) ON/OFF/AE Lock Index Mark
(24) Shutter Speed Dial
(25) AE Lock Button
(26) Hot Shoe Clip (X) Sync
(27) Strap Eyelet
(28) Accessory Terminal
(29) AE Release Button
(30) Lens Lock Release Button